

installation instructions

NOTE: RED DOT ON CENTER POST OF ROUGH-IN SHOULD LINE UP WITH THE FACE OF THE FINISHED WALL.

PERMANENT CONNECTIONS DO NOT ADJUST

