


VOLUME CONTROL INSTALLATION INSTRUCTIONS

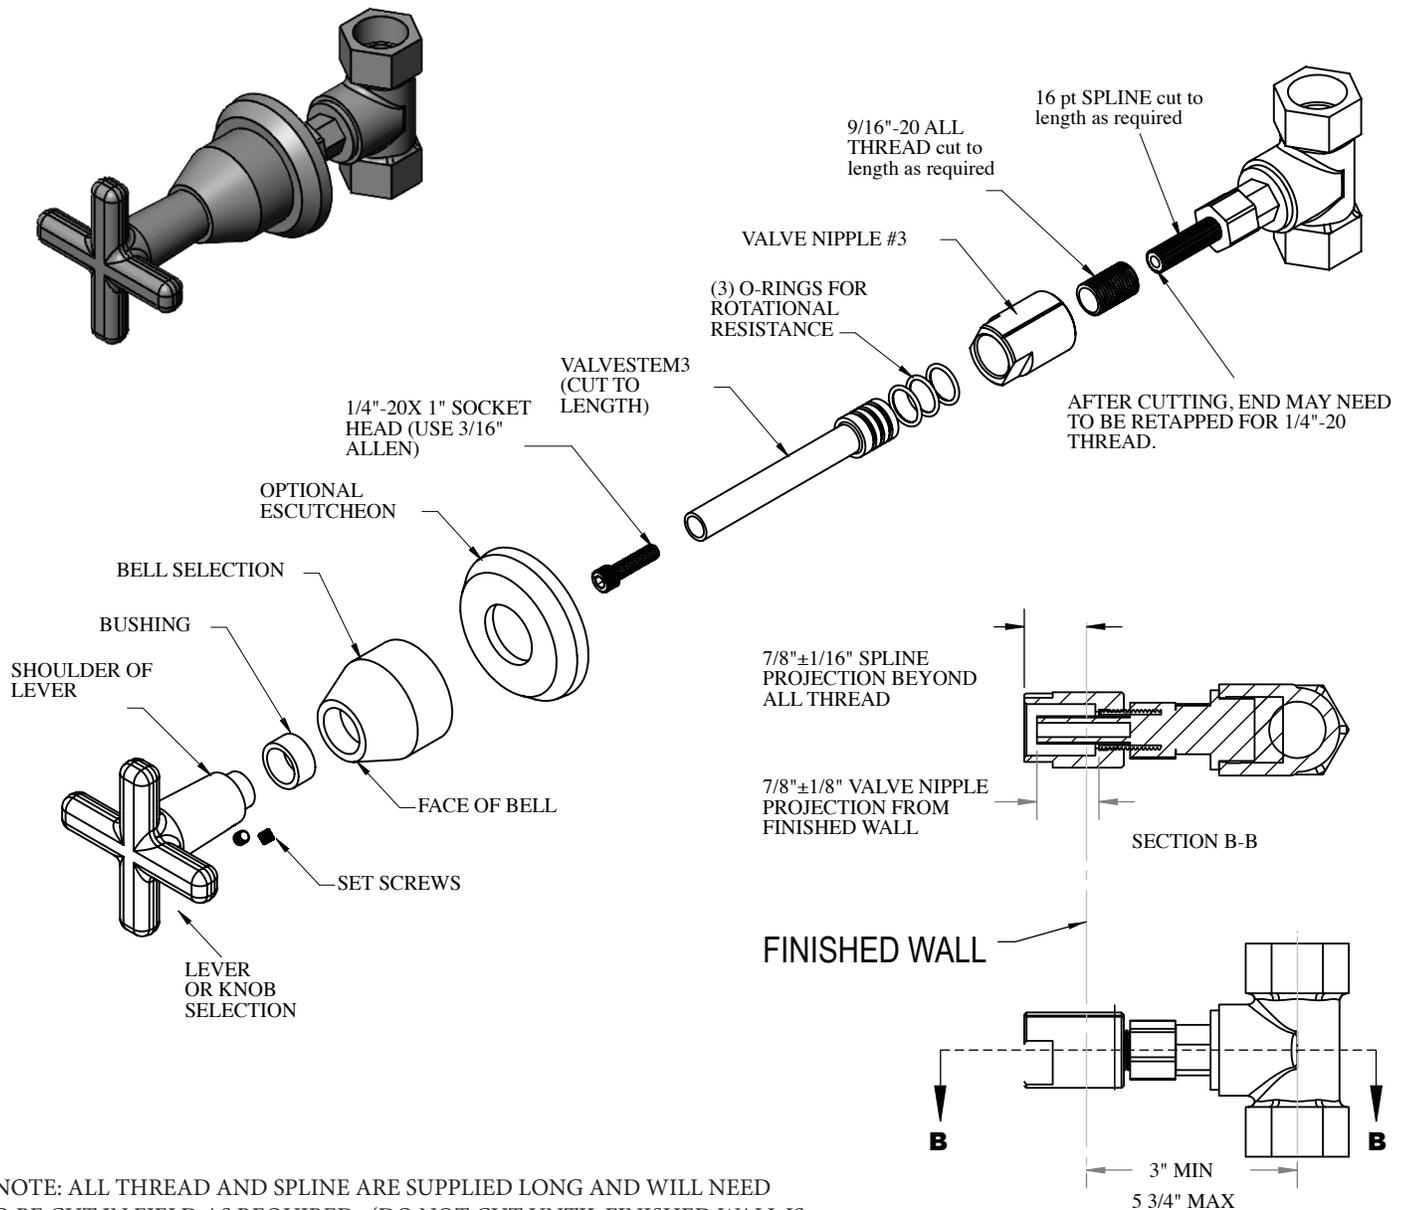

* NOTE: ALL THREAD AND SPLINE ARE SUPPLIED LONG AND WILL NEED TO BE CUT IN FIELD AS REQUIRED. (DO NOT CUT UNTIL FINISHED WALL IS DETERMINED)

REFER TO SECTION B-B TO DETERMINE LENGTHS FOR CUTTING ALL THREAD AND SPLINE. IN SOME SITUATIONS IT MAY BE NECESSARY TO RETAP THE END OF THE SPLINE FOR 1/4"-20 THREAD.

SLIDE LEVER OVER VALVESTEM3 UNTIL IT BOTTOMS OUT. MEASURE DISTANCE FROM FACE OF BELL TO SHOULDER OF LEVER. THIS IS THE LENGTH TO REDUCE THE VALVESTEM3

ROCKY MOUNTAIN

H A R D W A R E